Publication Number. MA3239-M01

Issue number 1

MODIFICATION INSTRUCTIONS

for the

KODAK MINILOADER 2 PLUS,

MODELS STAND-ALONE, 480 RA & M35-M

Service Codes 3236, 3239 & 3240

MODIFICATION No. M01

Type 1 REQUIRED

PURPOSE:

To fit new star washers to the main earthing screw of the Miniloader to ensure satisfactory earthing.

IMPORTANT: Only qualified service personnel should install this modification!

SERIAL NUMBERS:

Model Stand-Alone	(3236)	3001 - 3004
Model M35-M	(3239)	2603 - 2612
Model 480RA	(3240)	4001 - 4003

INSTALLATION TIME: Approximately 15 minutes

SPECIAL TOOLS: None

PARTS REQUIREMENT: See Parts list.

© Kodak Ltd.

PARTS LIST

PART NO.	DESCRIPTION	QUANTITY
30091101	MODIFICATION KIT	
THE KIT CONTAINS:		
30015669	M4 STAR WASHER (FLAT).	2
30015696	M4 STAR WASHER (DISHED).	1
MA3239-M01	MODIFICATION INSTRUCTIONS.	1

CAUTION

This equipment includes parts and assemblies sensitive to damage from electrostatic discharge. Use caution to prevent damage during all service procedures.

PLEASE NOTE

The information contained herein is based on the experience and knowledge relating to the subject matter gained by Kodak Limited prior to publication.

No patent license in granted by this information.

Kodak Limited reserves the right to change this information without notice, and makes no warranty, express or implied, with respect to this information. Kodak shall not be liable for any loss or damage, including consequential or special damages, resulting from the use of this information, even if the loss or damage is caused by Kodak's negligence or other fault.

 © Kodak Ltd.

MODIFICATION INSTRUCTIONS

1. Switch off the power to the MINILOADER.

2. Remove the TOP COVER and the right hand (from the front) SIDE PANEL from the MINILOADER.

3. Locate the EARTHING SCREW indicated in FIGURE 1. Carefully peel back the LIGHT SEAL STRIP to gain access to the SCREW HEAD, and remove the SCREW.

FIGURE 1

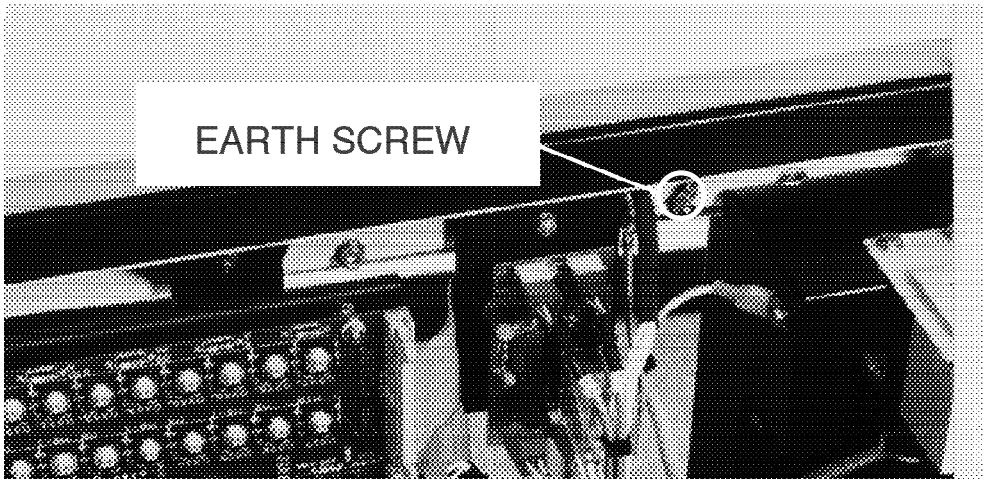

4. Reassemble the EARTHING SCREW using the new STAR WASHERS provided in the MODIFICATION KIT, taking care to assemble the WASHERS in the order shown in FIGURE 2. Make sure there is no PAINT on the FRAME where the WASHERS contact it.

FIGURE 2

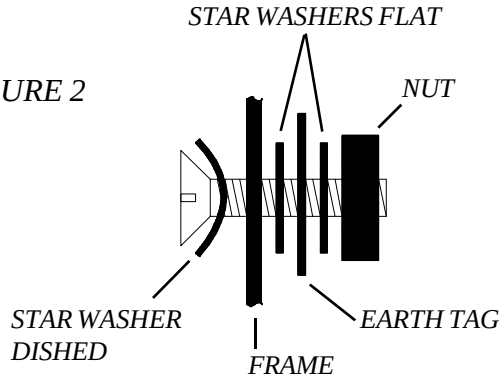

5. Refit the LIGHT SEAL STRIP, circle M01 on the MODIFICATION LABEL, and refit the PANELS removed in step 2.

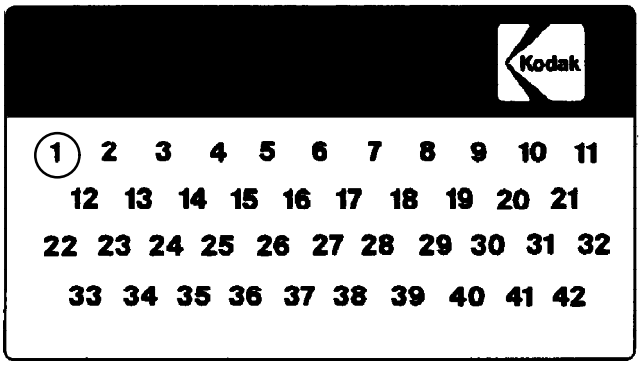

HEALTH SCIENCES DIVISION

CUSTOMER EQUIPMENT SERVICES DIVISION, SWALLOWDALE LANE, HEMEL HEMPSTEAD, HERTFORDSHIRE, ENGLAND.

 © Kodak Ltd.